



TROUBLE-SHOOTING GUIDE



A PRODUCT TRAINING INVESTIGATION

INTRODUCTION

The Product Training Department of TEREX Division is currently undertaking an investigation dealing with the feasibility of producing a TEREX Trouble-shooting Guide. Thus far, the Product Training Department has reviewed many methods of trouble-shooting, ranging from ones used in our own heavy earthmoving equipment industry to those used in the highly innovative automotive industry. After reviewing the various trouble-shooting methods, the Product Training Department decided to make this presentation to exhibit to all interested parties the trouble-shooting method which we thought to be the best.

On the following pages is presented an example of a 33 Series Hauler Steering Trouble-shooting Guide. The method used can currently be found in the General Motors Diagnosis and Repair Manual, an automotive publication. The trouble-shooting procedures were developed by the Service Research Center of the General Motors Technical Center in Warren, Michigan. The highly illustrative format was incorporated by the publisher of the General Motors Diagnosis and Repair Manual, Creative Universal, Inc.


The Product Training Department wishes to know your viewpoints on the applicability of using this format on our heavy earthmoving equipment. Therefore, any positive or negative comments would be greatly appreciated.

Hank Gleissner

Hank Gleissner
Product Training

TEREX Trouble – Shooting Guide

Hauler Steering Locator

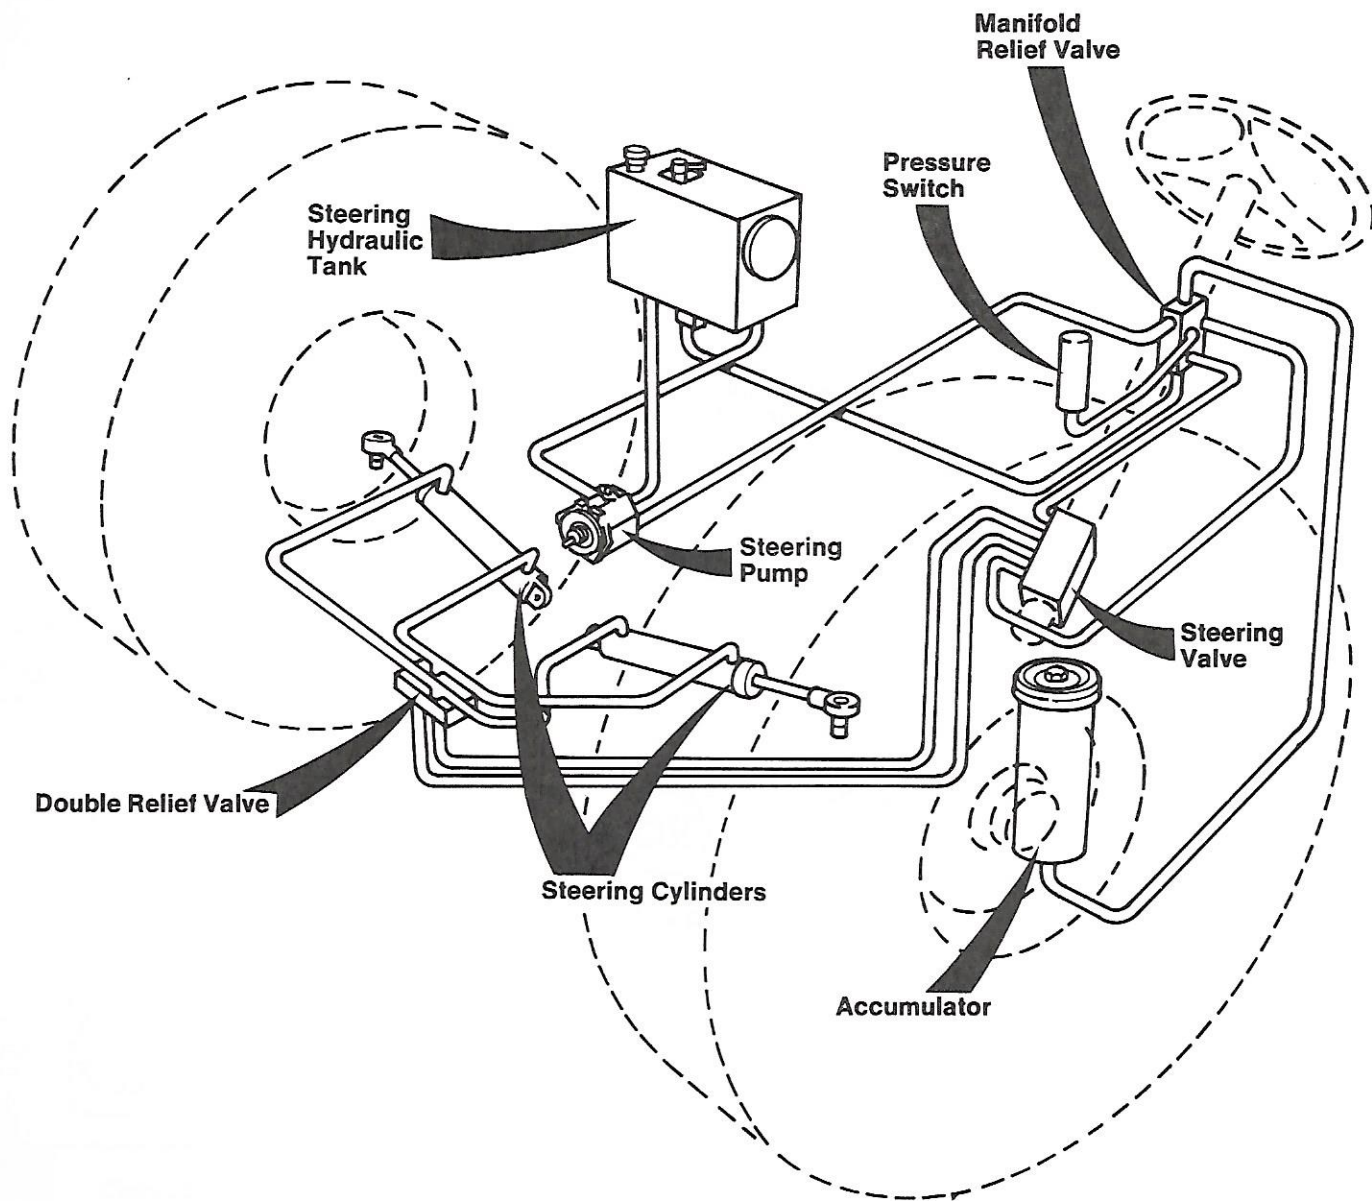

HAULER	SYSTEM PRESSURE	<i>Accum</i> RELIEF PRESSURE <i>Precharge</i>	LOW WARNING LIGHT SWITCH PRESSURE	<i>Relief</i> ACCUMULATOR PRECHARGE <i>Pressure</i>	DOUBLE RELIEF VALVE PRESSURE
33-05B	1750	800	1200	2500	2000
33-07	2000	800	1200	2500	2250
33-09	2000	800	1200	2500	2250
33-11B	2000	800	1200	2500	2250

TEREX Trouble Shooting Guide – Hauler Steering

Symptom: Slow Steering

Procedure

Results

<div data-bbox="159 279 186 331">1</div> <div data-bbox="248 285 675 394"> <p>Check: All Hoses Or Fittings For Damage All Steering Linkage For Damage Tires For Low Pressure</p> </div> <div data-bbox="228 464 753 831"> </div> <div data-bbox="865 520 997 669"> <p>Repair As Necessary</p> </div> <div data-bbox="1214 331 1328 485"> <p>Steering Not OK</p> </div> <div data-bbox="1214 659 1328 812"> <p>Steering OK</p> </div>	<div data-bbox="1482 342 1539 426">2</div> <div data-bbox="1466 659 1555 753">STOP</div>
<div data-bbox="151 873 191 926">2</div> <div data-bbox="248 882 623 936"> <p>Cold Check Steering Hydraulic Tank Oil Level</p> </div> <div data-bbox="224 989 678 1352"> </div> <div data-bbox="768 1024 865 1171"> <p>Low Oil Level</p> </div> <div data-bbox="954 1024 1084 1171"> <p>Fill To Cold Mark</p> </div> <div data-bbox="760 1234 865 1381"> <p>Oil Level OK</p> </div> <div data-bbox="1263 919 1377 1073"> <p>Steering Not OK</p> </div> <div data-bbox="1263 1087 1377 1241"> <p>Steering OK</p> </div>	<div data-bbox="1482 926 1539 1010">3</div> <div data-bbox="1466 1142 1555 1236">STOP</div> <div data-bbox="1482 1255 1539 1339">3</div>
<div data-bbox="151 1398 191 1451">3</div> <div data-bbox="248 1407 506 1440"> <p>Check Steering Time</p> </div> <div data-bbox="224 1507 553 1948"> </div> <div data-bbox="581 1638 800 1782"> <p>33-05B 4 Sec. 33-07 4 Sec. 33-09 4.6 Sec. 33-11B 5.8 Sec.</p> </div> <div data-bbox="881 1539 995 1686"> <p>Steering OK</p> </div> <div data-bbox="889 1801 1003 1948"> <p>Steering Not OK</p> </div> <div data-bbox="1247 1434 1360 1587"> <p>Warning Light On</p> </div> <div data-bbox="1247 1661 1360 1814"> <p>Warning Light Off</p> </div>	<div data-bbox="1482 1451 1539 1535">7</div> <div data-bbox="1466 1667 1555 1761">STOP</div> <div data-bbox="1482 1801 1539 1885">4</div>

*Times Are Approximate For New Steering Components



Symptom: Slow Steering — (Cont.)

Procedure

Results

4

Check Steering Hydraulic Filter

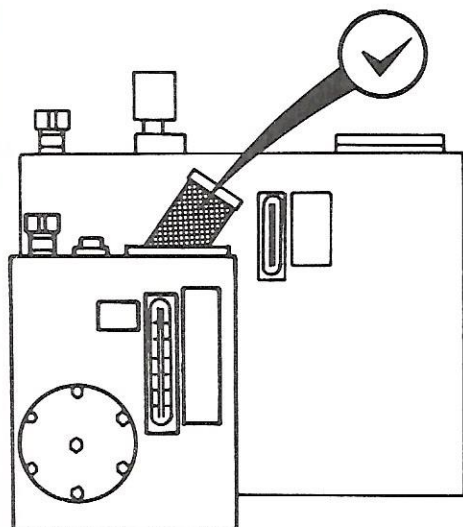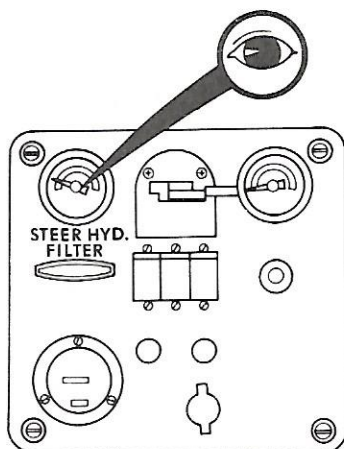

Less Than
20 PSI
OK

Check Filter For Dirt



**More Than
20 PSI
Not OK**

**If Dirty
Clean Steering
System
As Necessary**



**Steering
OK**

5



STOP



**Steering
Not OK**


5

**If Not Dirty
Check Gage
Operation**

5

5

Hot Check Steering Hydraulic Tank Oil Level

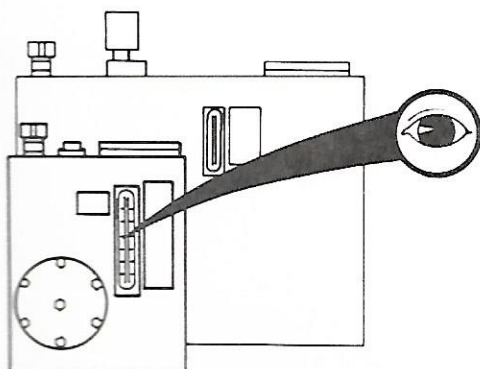

OK

Oil Level
OK



Low Oil Level

**Fill To
Cold Mark**



**Steering
OK**



**Steering
Not OK**

6



6

Symptom: Slow Steering — (Cont.)


(33-05B/07)

Procedure

Results

6

Check System Pressure

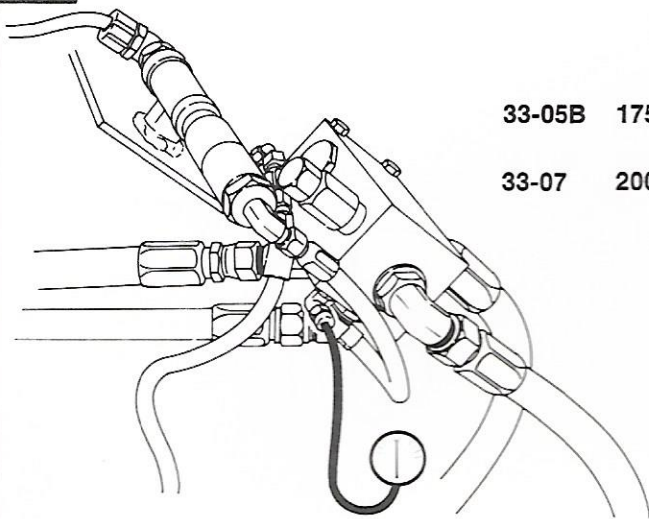


33-05B 1750 PSI

33-07 2000 PSI



OK

 On

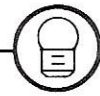

Low Pressure
Warning Light

 
7



Off

8

On

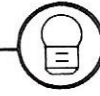

Low Pressure
Warning Light

 
7



Off



On

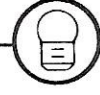

Low Pressure
Warning Light

7



Off


8

11



Not OK

Adjust At Pump
Compensator
Valve

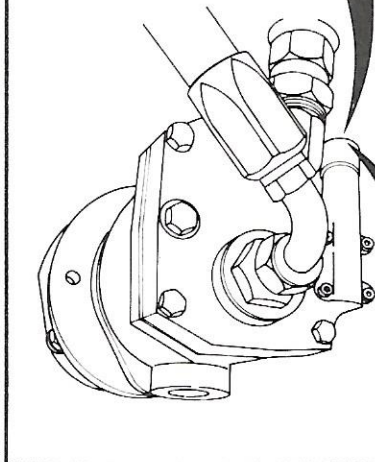

Steering
OK




Steering
Not OK

Adjusting Pump
Compensator Valve
Has No Effect

7

Replace Low Pressure Warning Switch

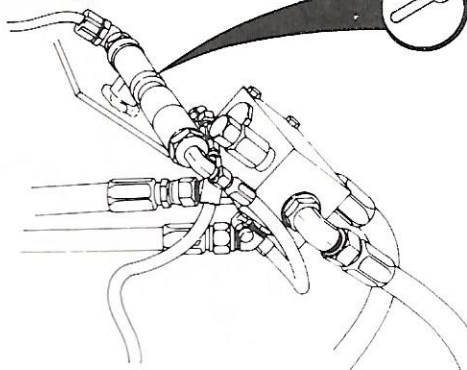

Steering
OK



Steering
Not OK

8

Symptom: Slow Steering — (Cont.)


(33-09/11B)

Procedure

Results

6

Check System Pressure

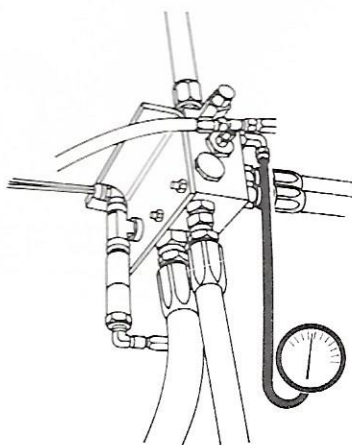

33-09 2000 PSI

33-11B 2000 PSI



OK

On



Low Pressure
Warning Light

7



Off

8

On



Low Pressure
Warning Light

7



Off



On



Low Pressure
Warning Light

7




Off

8



Not OK

Adjust At Pump
Compensator
Valve

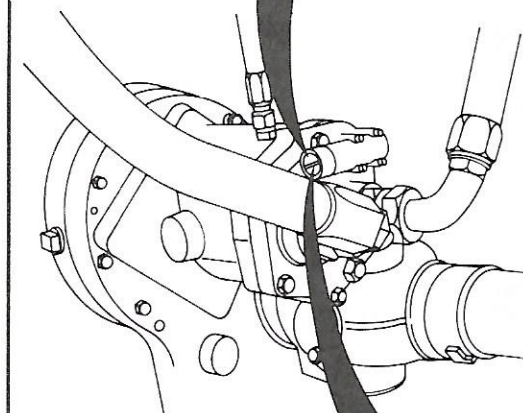

Steering
OK




Steering
Not OK

Adjusting Pump
Compensator Valve
Has No Effect



7

Replace Low Pressure Warning Switch

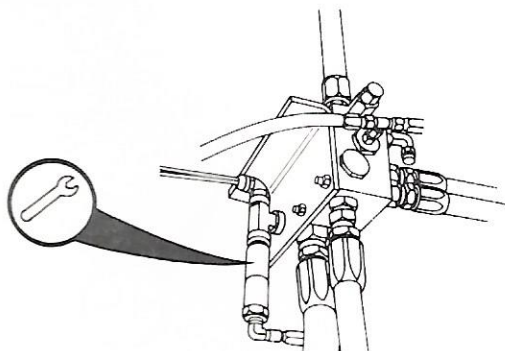

Steering
OK



Steering
Not OK




8

Symptom: Slow Steering — (Cont.)

(33-05B/07)

Procedure

Results

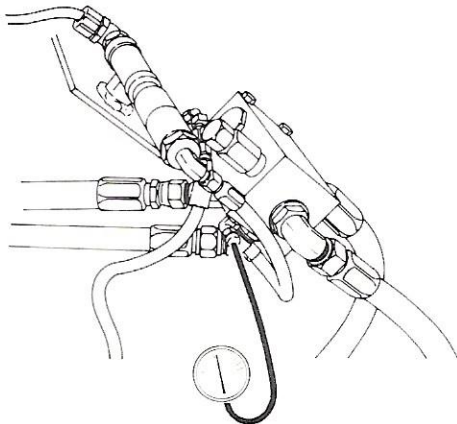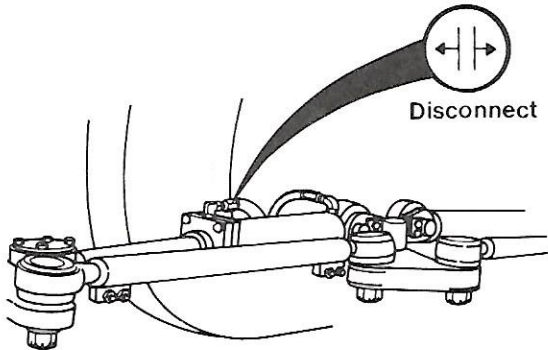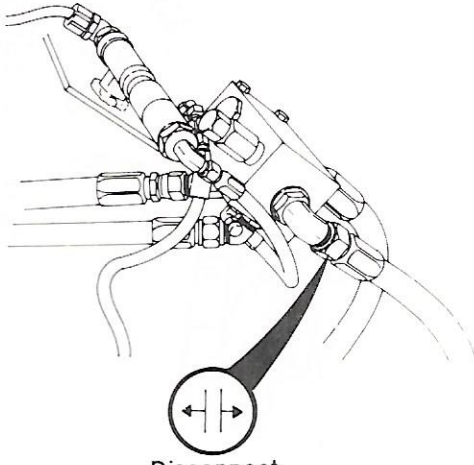8	<p>Check Accumulator Precharge</p>  <pre> graph LR A((OK Less Than 800 PSI Not OK)) --> B[Charge Accumulator] B --> C((Steering OK)) B --> D((Steering Not OK)) C --> E[9] D --> F[9] G((OK 800 PSI OK)) --> F </pre>	<p>STOP</p> <p>9</p> <p>9</p>
9	<p>Check Steering Cylinders For By-Passing Oil</p>  <pre> graph LR A((OK Not OK)) --> B[Repair Or Replace As Necessary] B --> C((Steering OK)) B --> D((Steering Not OK)) C --> E[10] D --> F[10] G((OK OK)) --> F </pre>	<p>STOP</p> <p>10</p> <p>10</p>
10	<p>Check Secondary Relief Valve For By-Passing Oil</p>  <pre> graph LR A((OK OK)) --> B[11] C((OK Not OK)) --> D[Repair Or Replace As Necessary] D --> E((Steering OK)) D --> F((Steering Not OK)) E --> G[11] F --> G </pre>	<p>11</p> <p>STOP</p> <p>11</p>

Symptom: Slow Steering — (Cont.)


(33-09/11B)

Procedure

Results

8

Check Accumulator Precharge

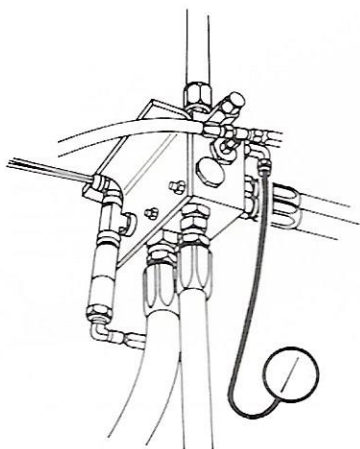

OK
Less Than
800 PSI
Not OK

Charge
Accumulator

OK
800 PSI
OK

**Steering
OK**

**Steering
Not OK**


STOP

9

9

9

Check Steering Cylinders For By-Passing Oil

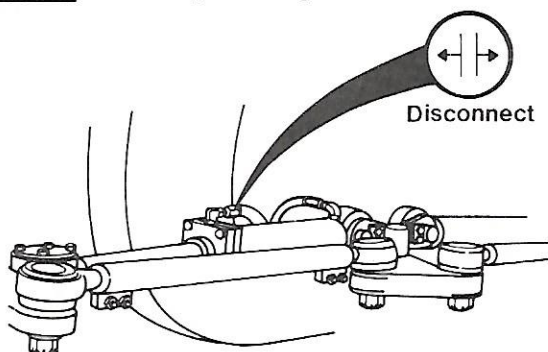

OK
Not OK

Repair Or
Replace As
Necessary

OK
OK

**Steering
OK**

**Steering
Not OK**


STOP

10

10

10

Check Secondary Relief Valve For By-Passing Oil

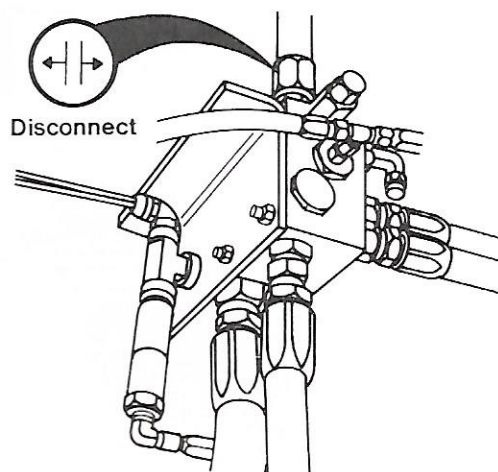

OK
OK

OK
Not OK

Repair Or
Replace As
Necessary

**Steering
OK**

**Steering
Not OK**

11

STOP




11

Symptom: Slow Steering — (Cont.)

(33-05B/07)

Procedure

Results

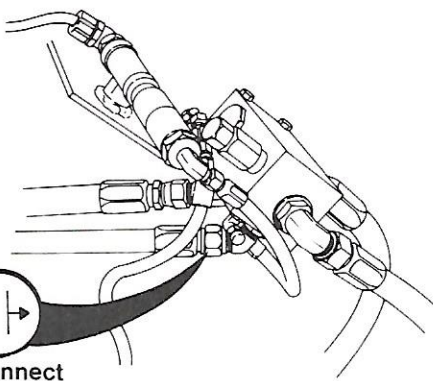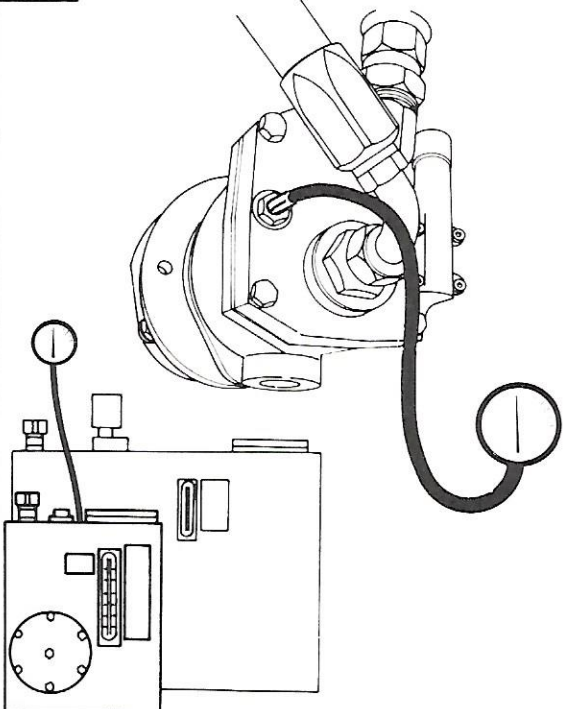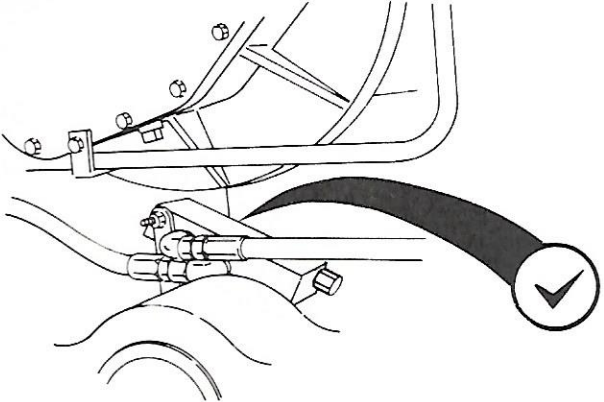











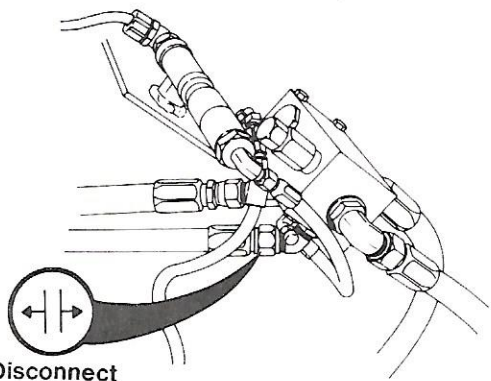




<p>11</p>	<p>Check Steering Valve For By-Passing Oil</p>  <p>Disconnect</p> <p>OK (with crossed-out O) → Not OK → Repair Or Replace As Necessary</p> <p>OK → Steering OK → STOP</p> <p>OK → Steering Not OK → 12</p>	<p>STOP</p> <p>12</p> <p>12</p>
<p>12</p>	<p>Check Pump Operation</p>  <p>OK → 13</p> <p>OK (with crossed-out O) → Not OK → Repair Or Replace As Necessary</p> <p>OK (with crossed-out O) → Steering OK → STOP</p> <p>OK (with crossed-out O) → Steering Not OK → 13</p>	<p>13</p> <p>STOP</p> <p>13</p>
<p>13</p>	<p>Check Double Relief Valve Operation</p>  <p>Repair Or Replace As Necessary</p> <p>→ STOP</p>	<p>STOP</p>

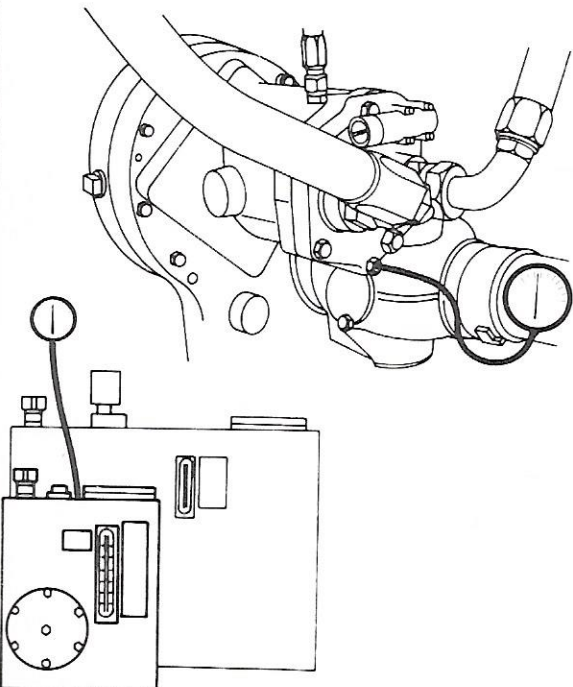Symptom: Slow Steering — (Cont.)

(33-09/11B)

Procedure

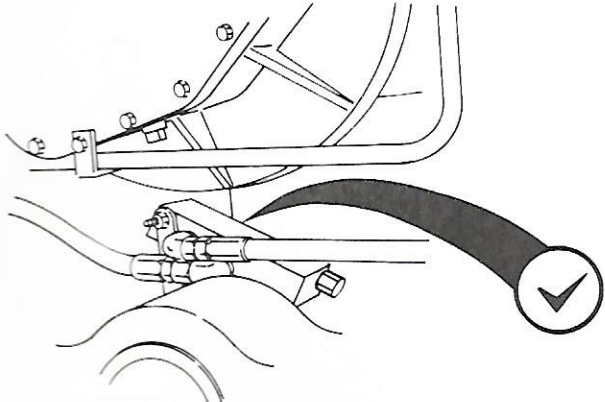
Results

11	Check Steering Valve For By-Passing Oil	 <div data-bbox="690 304 787 441">  Not OK </div> <div data-bbox="917 304 1055 493">  Repair Or Replace As Necessary </div> <div data-bbox="690 525 787 661">  OK </div> <div data-bbox="1161 199 1364 577">  Steering OK </div> <div data-bbox="1258 409 1356 577">  Steering Not OK </div>	<div data-bbox="1453 199 1542 304">  </div> <div data-bbox="1453 430 1542 535"> 12 </div> <div data-bbox="1453 535 1542 640"> 12 </div>
12	Check Pump Operation	 <div data-bbox="738 787 836 924">  OK </div> <div data-bbox="738 1102 836 1239">  Not OK </div> <div data-bbox="933 1102 1071 1291">  Repair Or Replace As Necessary </div> <div data-bbox="1161 997 1364 1375">  Steering OK </div> <div data-bbox="1258 1228 1356 1396">  Steering Not OK </div>	<div data-bbox="1453 787 1542 892"> 13 </div> <div data-bbox="1453 997 1542 1102">  </div> <div data-bbox="1453 1228 1542 1333"> 13 </div>
13	Check Double Relief Valve Operation	 <div data-bbox="755 1585 901 1774">  Repair Or Replace As Necessary </div>	<div data-bbox="1453 1669 1542 1774">  </div>

Symptom: Opposite Steering

Procedure


Results

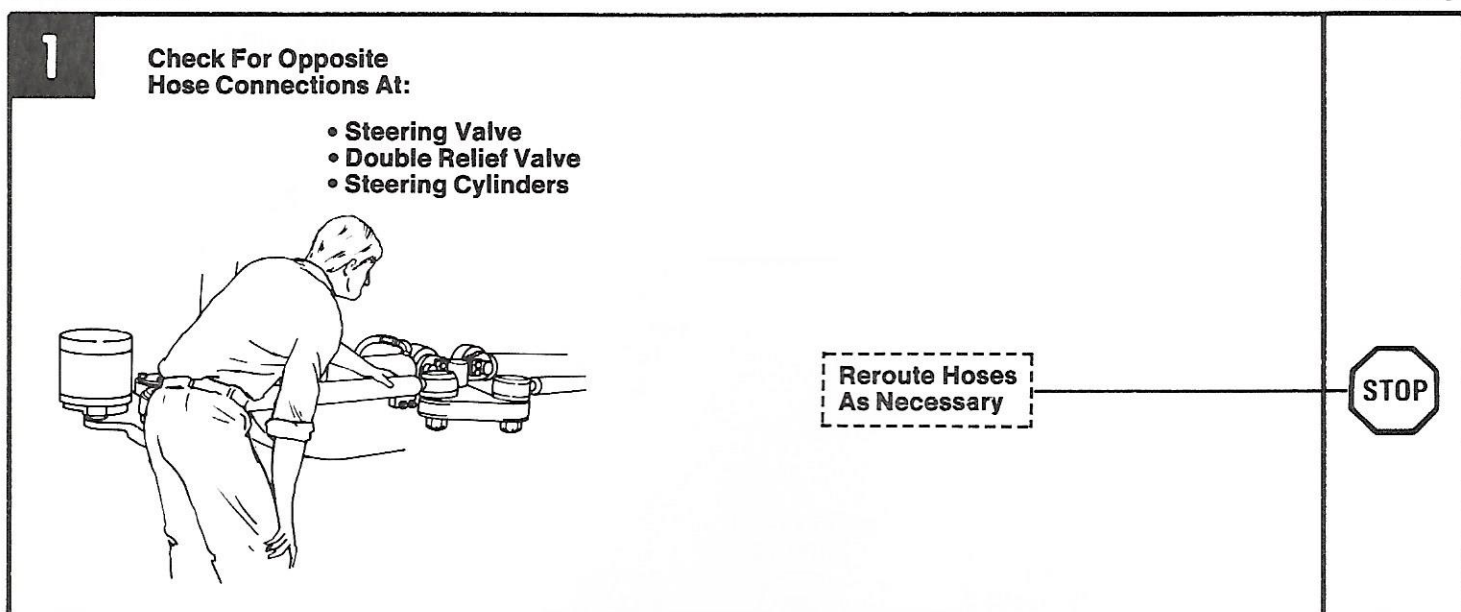

Symptom: No Steering Action

Procedure

Results

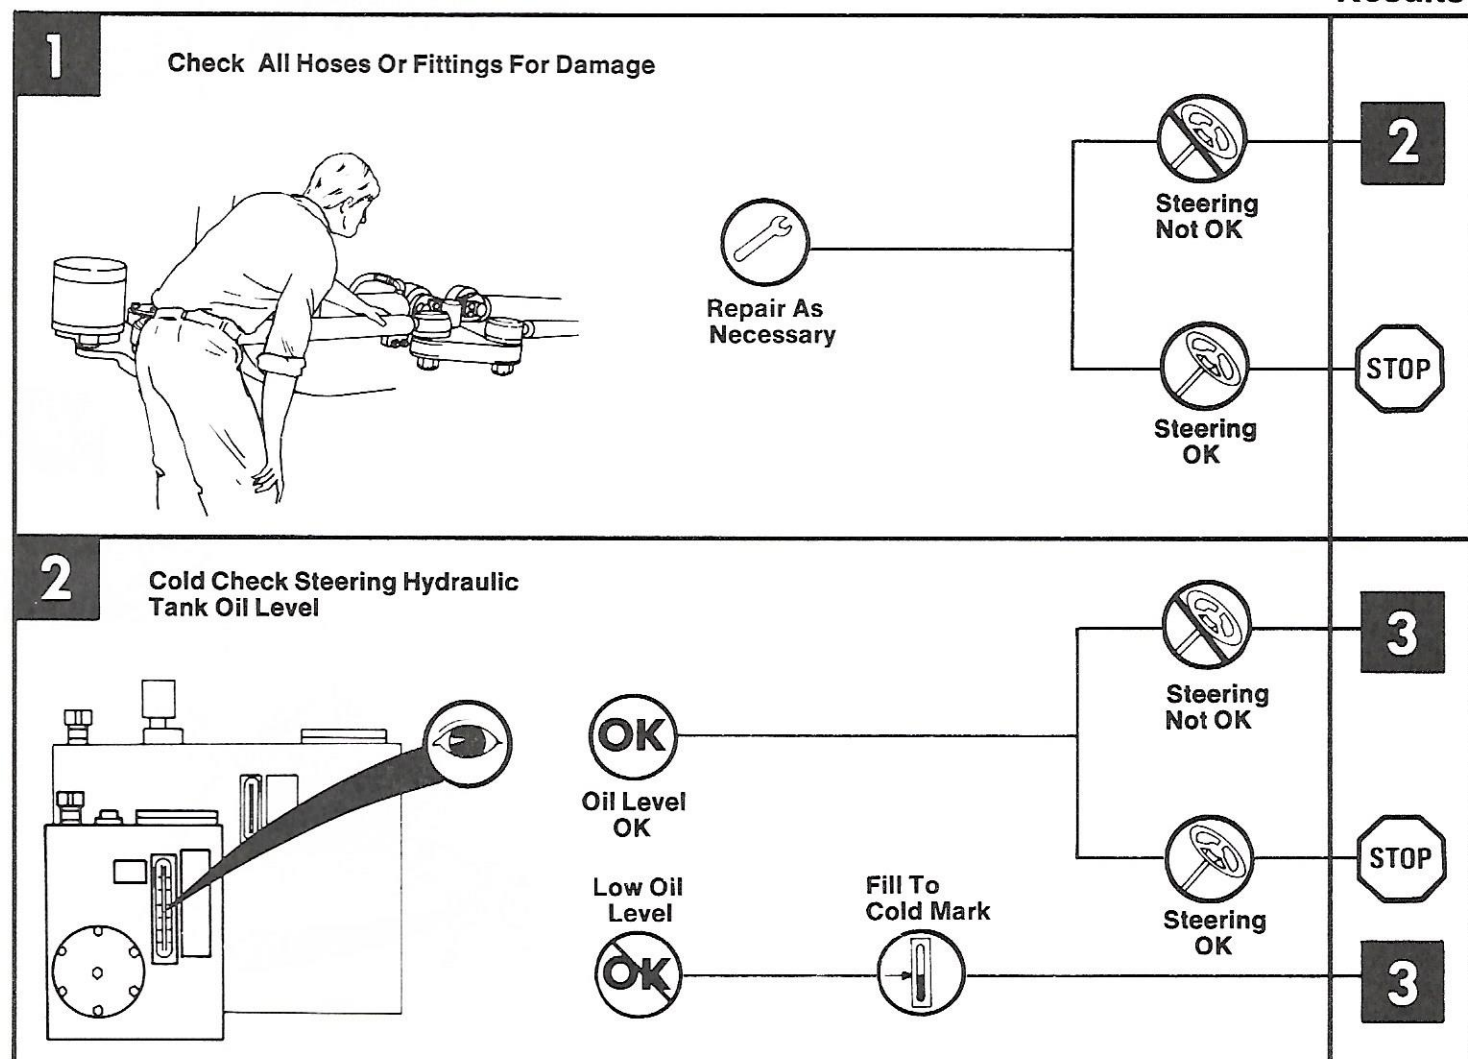



Symptom: No Steering Action — (Cont.)

Procedure

Results

3

Check Steering Hydraulic Filter

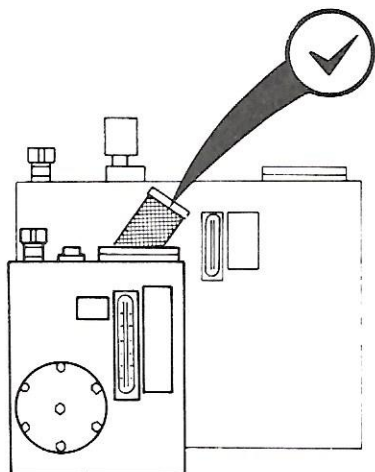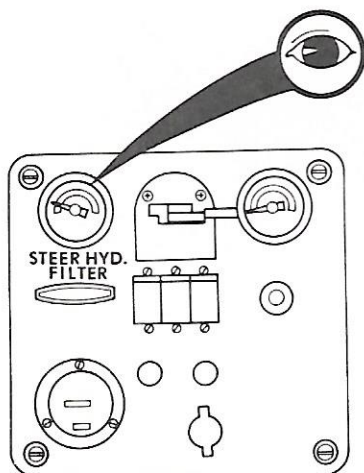

Less Than
20 PSI
OK



More Than
20 PSI
Not OK

Check Filter
For Dirt



If Dirty
Clean Steering
System
As Necessary

If Not Dirty
Check Gage
Operation



Steering
OK



Steering
Not OK

4




4

4

4

Check Steering Column Linkage

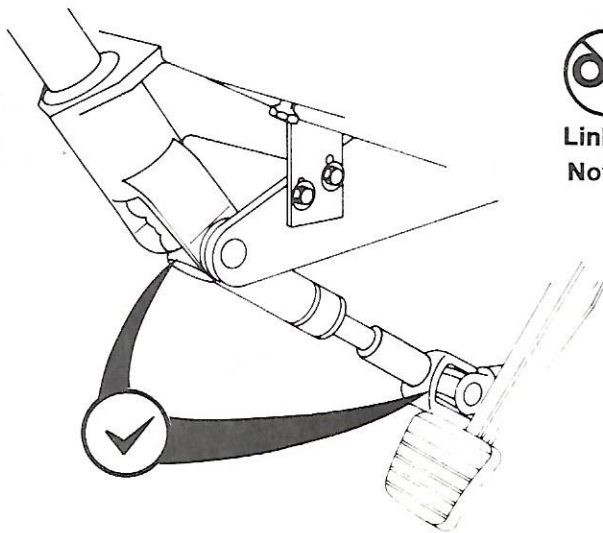

Linkage
Not OK



Repair Or
Replace As
Necessary



Steering
Not OK



Steering
OK



Linkage
OK

5



5

Symptom: No Steering Action — (Cont.)


(33-05B/07)

Procedure

Results

5

Check System Pressure

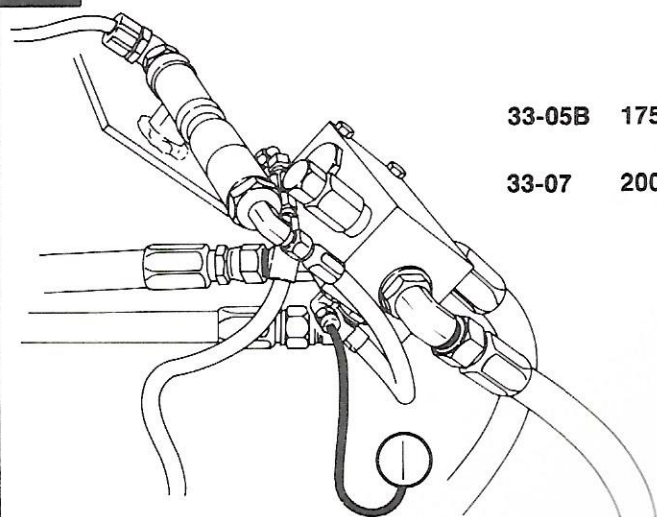

33-05B 1750 PSI

33-07 2000 PSI



OK

On



6

Low Pressure
Warning Light



7

Off

On



6

Low Pressure
Warning Light



Off

On



6

Low Pressure
Warning Light



7

Off



Not OK

Adjust At Pump
Compensator
Valve



Steering
OK




Steering
Not OK

Adjusting Pump
Compensator Valve
Has No Effect



6

Replace Low Pressure Warning Switch

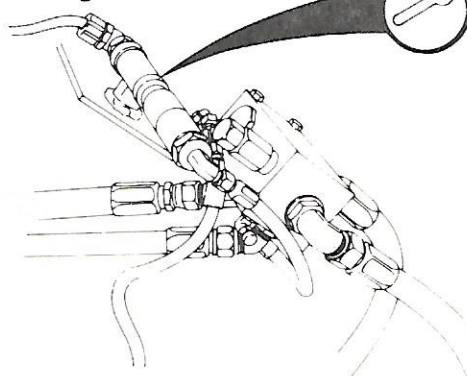

Steering
OK



Steering
Not OK

7

Symptom: No Steering Action — (Cont.)


(33-09/11B)

Procedure

Results

5

Check System Pressure

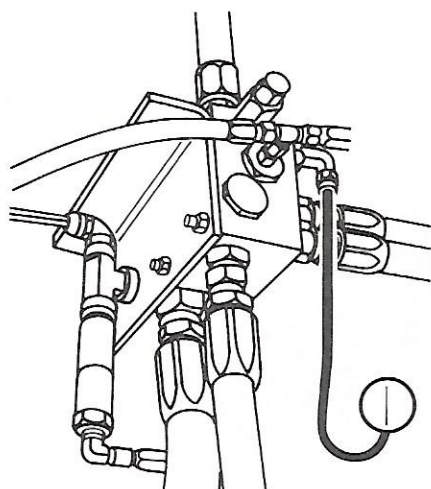

33-09 2000 PSI
33-11B 2000 PSI



OK

On



Low Pressure
Warning Light

6



Off

7

On



6

Low Pressure
Warning Light



Off



On



6

Low Pressure
Warning Light



Off


7

7



Not OK

Adjust At Pump
Compensator
Valve

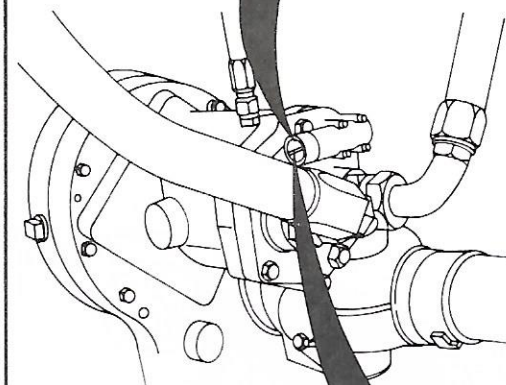

Steering
OK




Steering
Not OK

Adjusting Pump
Compensator Valve
Has No Effect

6

Replace Low Pressure Warning Switch

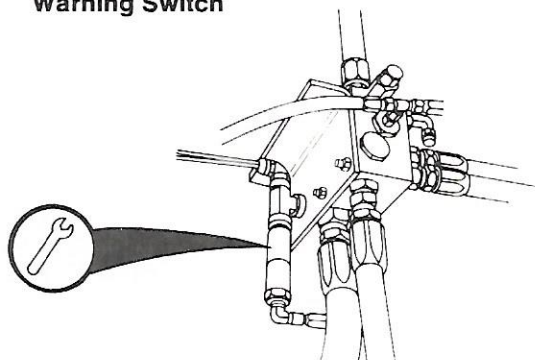

Steering
OK









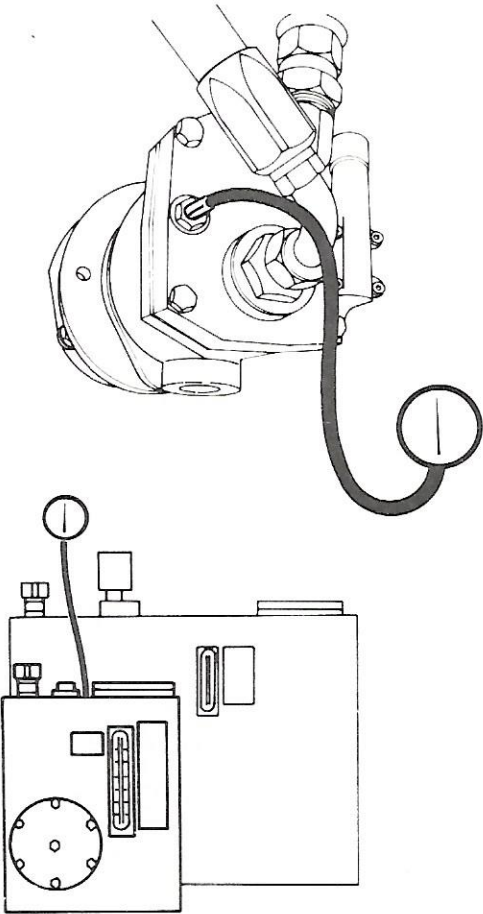





Steering
Not OK

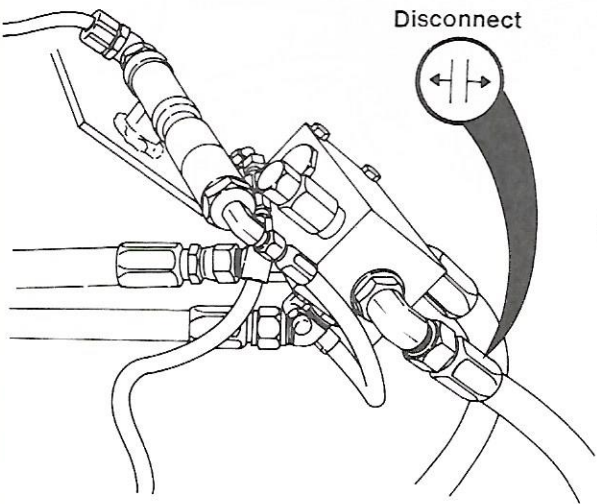7

Symptom: No Steering Action — (Cont.)

(33-05B/07)
Results

Procedure

<div data-bbox="126 184 191 258">7</div> <div data-bbox="245 195 542 247">Check Secondary Relief Valve For By-Passing Oil</div> <div data-bbox="118 321 711 821"></div> <div data-bbox="719 233 812 359"> OK</div> <div data-bbox="714 499 812 625"> Not OK</div> <div data-bbox="922 499 1062 678"> Repair Or Replace As Necessary</div> <div data-bbox="1243 373 1351 531"> Steering OK</div> <div data-bbox="1243 604 1351 762"> Steering Not OK</div>	<div data-bbox="1442 233 1531 317">8</div> <div data-bbox="1442 380 1531 464">STOP</div> <div data-bbox="1442 611 1531 695">8</div>
<div data-bbox="126 877 191 951">8</div> <div data-bbox="232 898 513 930">Check Pump Operation</div> <div data-bbox="172 989 651 1896"></div> <div data-bbox="800 1073 893 1199"> OK</div> <div data-bbox="800 1524 893 1650"> Not OK</div> <div data-bbox="967 1524 1107 1703"> Repair Or Replace As Necessary</div> <div data-bbox="1243 1402 1351 1560"> Steering OK</div> <div data-bbox="1243 1633 1351 1791"> Steering Not OK</div>	<div data-bbox="1442 1073 1531 1157">9</div> <div data-bbox="1442 1413 1531 1497">STOP</div> <div data-bbox="1442 1644 1531 1728">9</div>

Symptom: No Steering Action — (Cont.)


(33-09/11B)

Procedure

Results

7

Check Secondary Relief Valve For By-Passing Oil

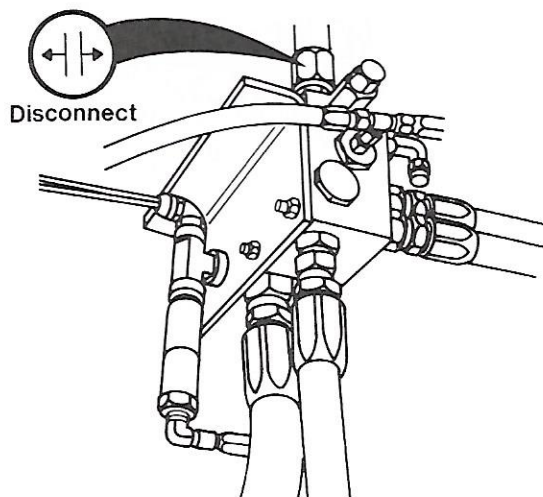

OK
OK

Not OK

Repair Or
Replace As
Necessary

Steering
OK

Steering
Not OK



8

STOP

8

8

Check Pump Operation

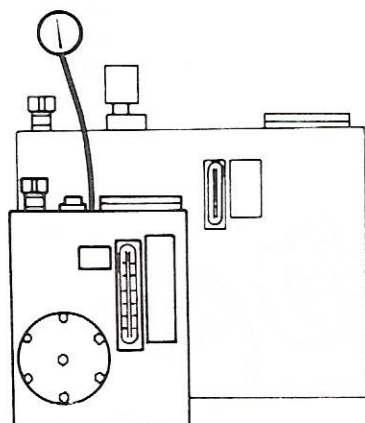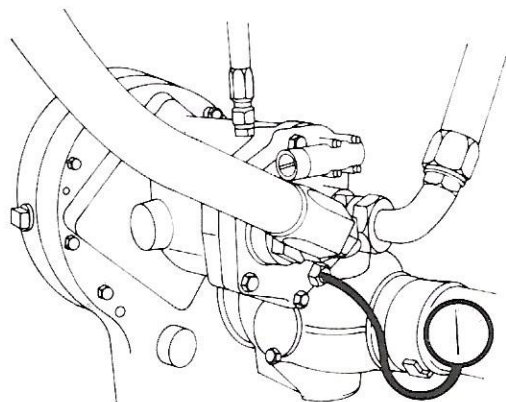

OK
OK

Not OK

Repair Or
Replace As
Necessary

Steering
OK

Steering
Not OK

9

STOP

9


Symptom: No Steering Action — (Cont.)

Procedure

Results

9

Check Pump Drive

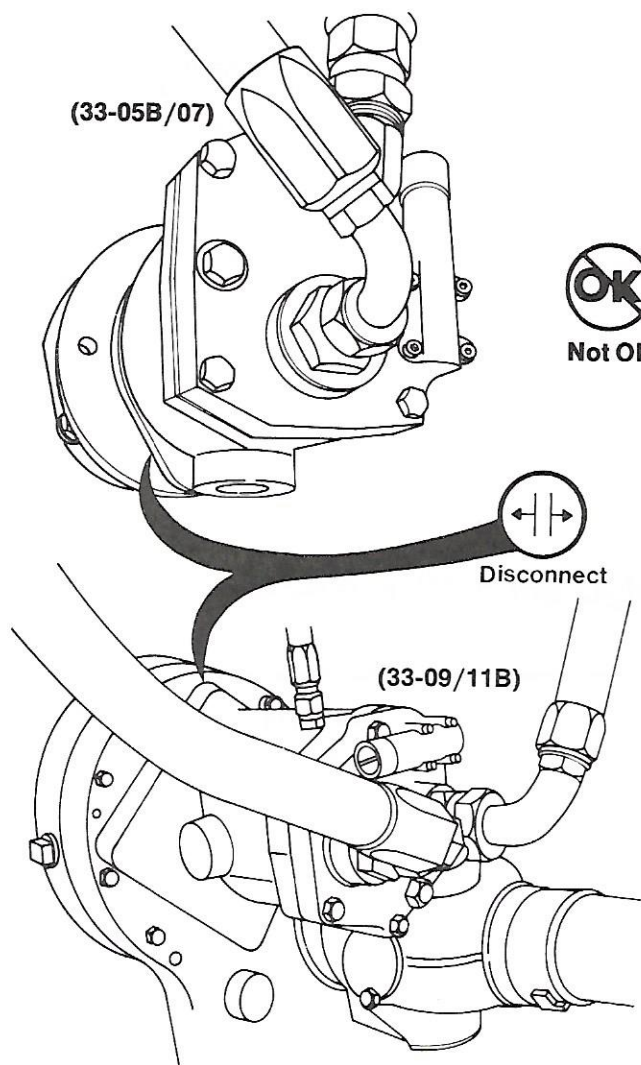

Not OK



Repair Or
Replace As
Necessary



Steering
OK



Steering
Not OK

10




OK

10

10

Check For Dirt In Sleeve And Spool Steering Valve

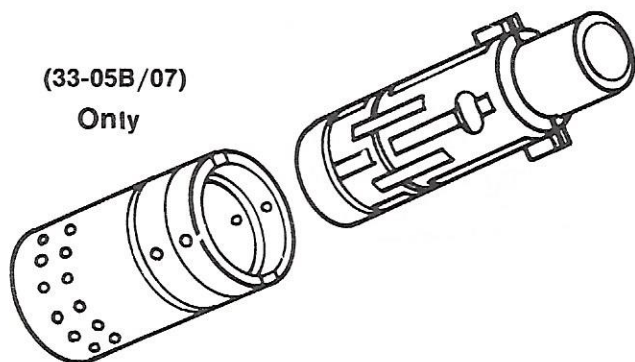



Clean Or
Replace As
Necessary



Symptom: Steering Wheel Does Not Center

Procedure




Results

<div data-bbox="138 195 162 241">1</div> <div data-bbox="243 205 381 235">Check For:</div> <div data-bbox="224 325 430 424">Broken Springs In Steering Valve (33-05B/07)</div> <div data-bbox="836 262 1071 361">Broken Torsion Bar In Steering Valve (33-09/11B)</div> <div data-bbox="1039 604 1177 661">Replace As Necessary</div> <div data-bbox="1063 667 1156 756"></div>	<div data-bbox="1445 667 1534 756"></div>
--	--

Symptom: Low Pressure Warning Light Never Goes On

Procedure

Results

<div data-bbox="138 968 162 1014">1</div> <div data-bbox="243 978 597 1056">Check For Electrical Shorts In The Low Pressure Warning Switch Circuit</div> <div data-bbox="349 1213 441 1302"></div> <div data-bbox="974 1617 1112 1673">Replace As Necessary</div> <div data-bbox="1003 1675 1096 1764"></div>	<div data-bbox="1445 1675 1534 1764"></div>
---	--


Symptom: Steering O.K., Low Pressure Warning Light Never Goes Out

Procedure


Results

1

Check For Electrical Shorts
In The Low Pressure Warning
Switch Circuit

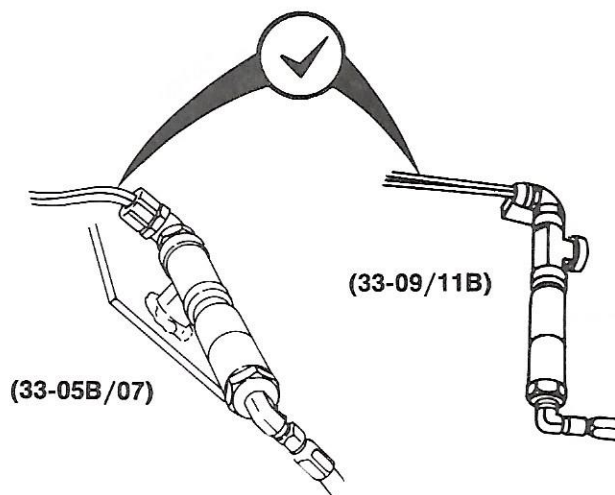

Repair Or
Replace As
Necessary

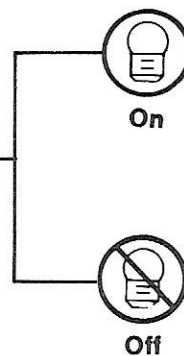


2

STOP


2

Check For Plugged Hydraulic
Line Between Manifold Relief
Valve And Pressure Switch

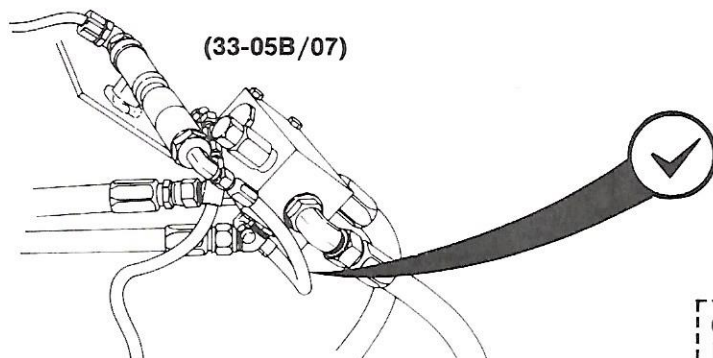

Clean As
Necessary




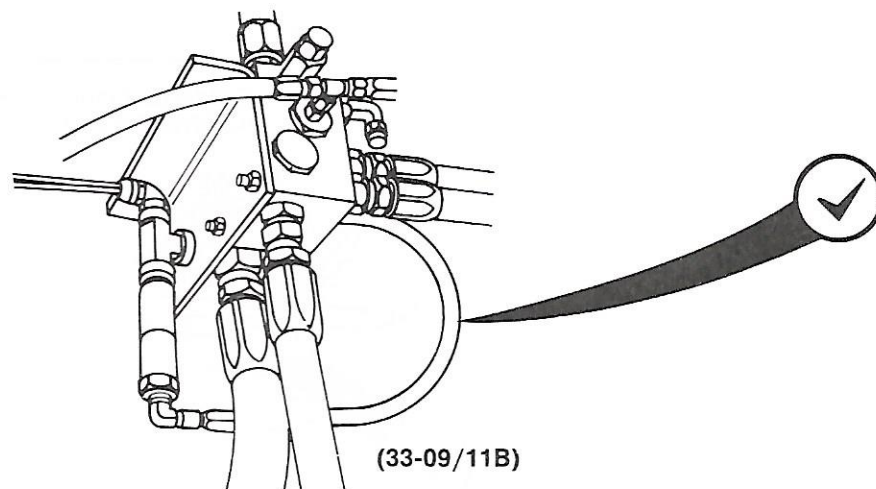








STOP

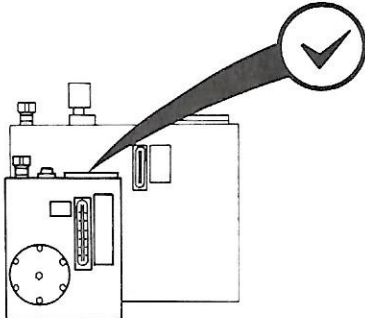

Symptom: Erratic Steering

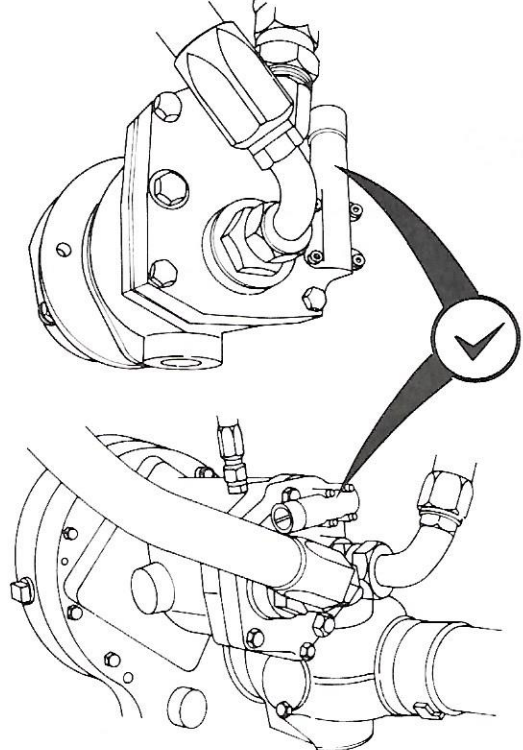Procedure



Results

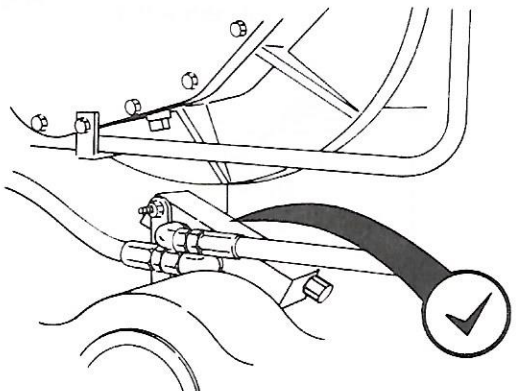1	<div data-bbox="224 195 462 247">Check For Foaming Hydraulic Oil</div> <div data-bbox="203 262 565 577"></div> <div data-bbox="738 210 836 325"> Oil OK</div> <div data-bbox="738 378 836 525"> Foaming Oil</div> <div data-bbox="885 388 1079 472">Flush System As Necessary</div> <div data-bbox="1226 294 1339 441"> Steering OK</div> <div data-bbox="1226 462 1339 609"> Steering Not OK</div>	<div data-bbox="1437 210 1526 283">2</div> <div data-bbox="1437 304 1526 388">STOP</div> <div data-bbox="1437 483 1526 556">2</div>
2	<div data-bbox="230 651 565 703">Inspect Compensator Valve On Steering Pump</div> <div data-bbox="138 714 657 1459"></div> <div data-bbox="722 819 893 966"> Compensator Valve OK</div> <div data-bbox="722 1134 893 1291"> Compensator Valve Not OK</div> <div data-bbox="950 1050 1096 1134">Repair Or Replace As Necessary</div> <div data-bbox="1218 1029 1331 1176"> Steering OK</div> <div data-bbox="1218 1249 1331 1396"> Steering Not OK</div>	<div data-bbox="1437 829 1526 903">3</div> <div data-bbox="1437 1039 1526 1123">STOP</div> <div data-bbox="1437 1270 1526 1344">3</div>
3	<div data-bbox="224 1501 474 1554">Check Double Relief Valve Operation</div> <div data-bbox="129 1575 641 1963"></div> <div data-bbox="730 1680 876 1858"> Repair Or Replace As Necessary</div>	<div data-bbox="1437 1690 1526 1774">STOP</div>

Symptom: Hard Steering

Procedure


Results
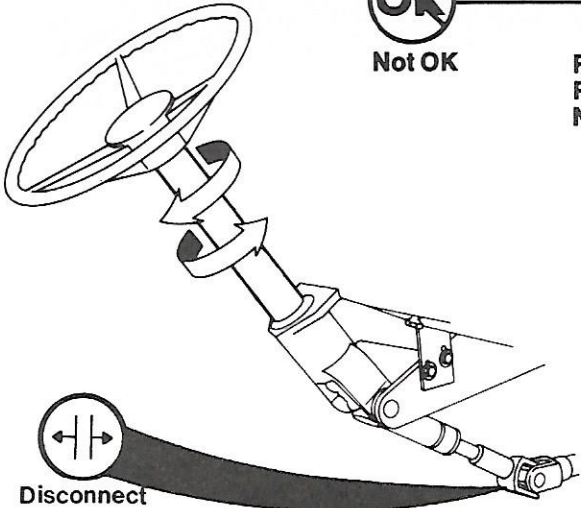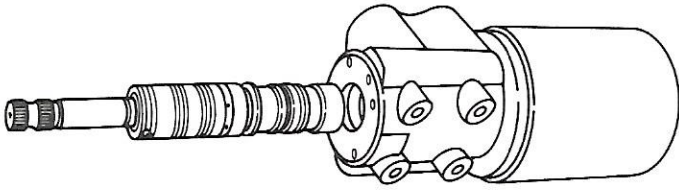
<div><div>1</div><div>Check Steering Column For Binding</div><div><div><div>Not OK</div><div>Repair Or Replace As Necessary</div><div>Steering Not OK</div><div>Steering OK</div><div>OK</div></div></div></div>	<div><div>2</div><div>STOP</div><div>2</div></div>
<div><div>2</div><div>Check Steering Valve Input Shaft For Binding</div><div><div>Clean Or Replace As Necessary</div></div></div>	<div><div>STOP</div></div>

Symptom: No Steering When Steering Wheel Is Turned Slowly

Procedure

Results
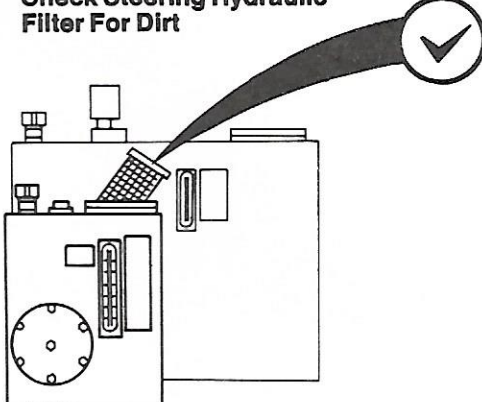
<div><div>1</div><div>Check Steering Hydraulic Filter For Dirt</div><div><div><div>Replace And Clean System As Necessary</div></div></div></div>	<div><div>STOP</div></div>
---	----------------------------

